


# Handle Installation Instructions


## Bar Pull #X-BARHANDLE

For metal storage use:  
M4 X 8mm Pan Head Screw  
#RH-MSZPPM48  
For laminate storage use:  
M4 x 30mm Pan Head Screw  
#RH-MSZPPM430

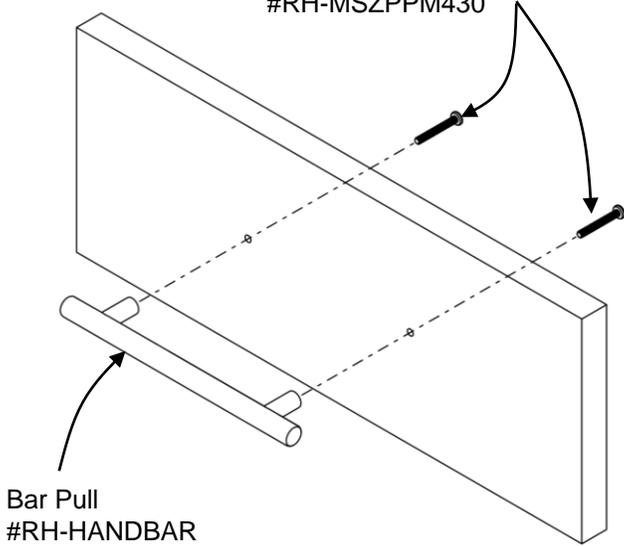


## Rectangle Pull #X-RECTHANDLE

For metal storage use:  
#8-32 x 7/16" Pan Head Screw  
#RH-MSZPP832716A  
For laminate storage use:  
\*8-32 x 1" Pan Head Screw  
#RH-90272A199

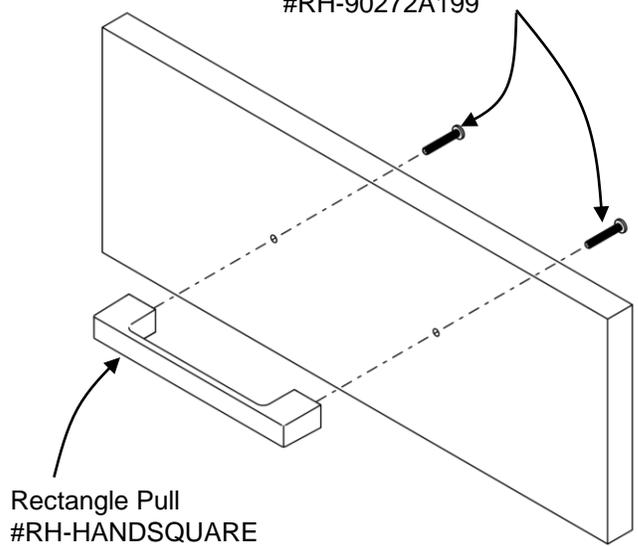


## L-Pull #X-L-PULLHANDLE

For metal storage use:  
M4 x 8mm Pan Head Screw  
#RH-MSZPPM48  
For laminate storage use:  
M4 x 25mm Pan Head Screw  
#RH-MSZPPM425-A

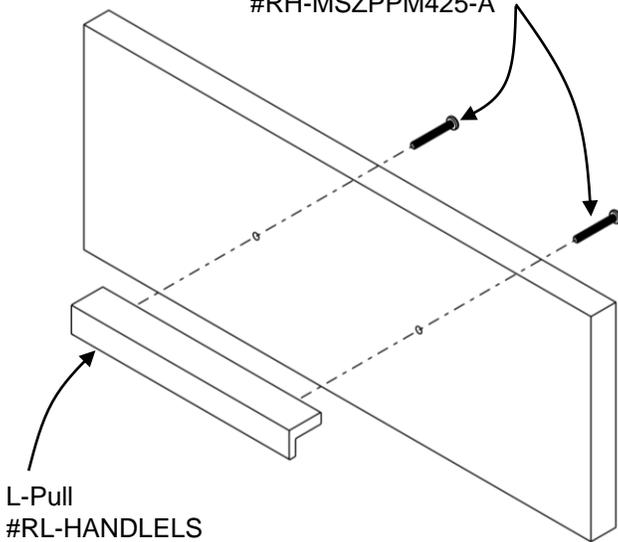


## Loop Pull #X-LOOPHANDLE

For metal storage use:  
M4 x 6mm Pan Head Screw  
#RH-MSZPPM46-I  
For laminate storage use:  
M4 x 25mm Pan Head Screw  
#RH-MSZPPM425-A

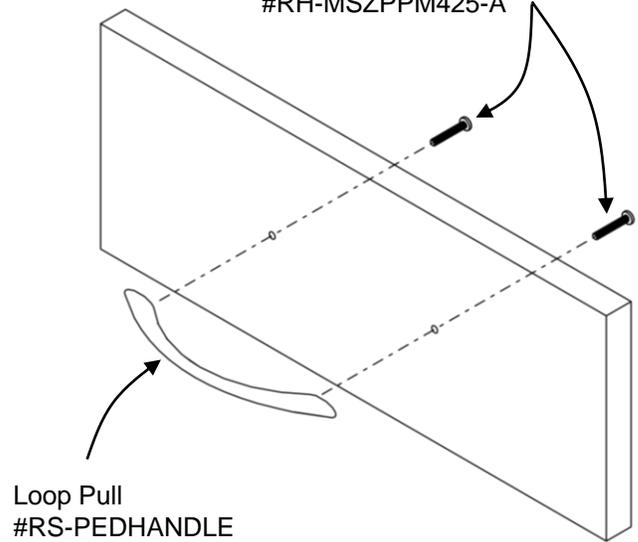

# Handle Installation Instructions

Slim Pull #X-SLIMHANDLExx		
Handle Part #	Length	# Screws
RH-HANDSP12	12.00	2
RH-HANDSP12A	11.94	3
RH-HANDSP15	15.23	3
RH-HANDSP15A	15.16	3
RH-HANDSP16	15.57	3
RH-HANDSP16A	15.69	3
RH-HANDSP16B	15.85	3
RH-HANDSP18	17.82	3
RH-HANDSP18A	18.26	3
RH-HANDSP18B	18.00	3
RH-HANDSP23	22.44	3
RH-HANDSP24	23.82	3
RH-HANDSP24A	23.94	3
RH-HANDSP30	29.82	3
RH-HANDSP30B	29.04	3
RH-HANDSP35	35.04	5
RH-HANDSP36	35.82	5
RH-HANDSP42	41.82	5
RH-HANDSP21	20.84	3
RH-HANDSP29	29.04	3

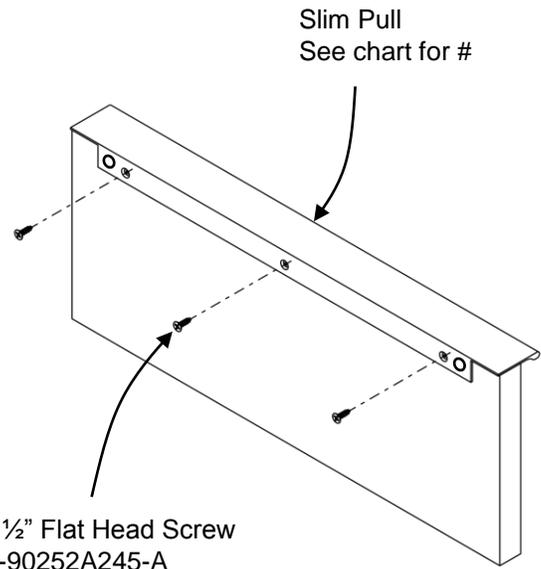

#6 x 1/2" Flat Head Screw  
#RH-90252A245-A  
See chart for qty

## Bar Pull (For Pull Out Towers Only) #X-BARHANDLE13

