


BR33 Wireless Panic Button

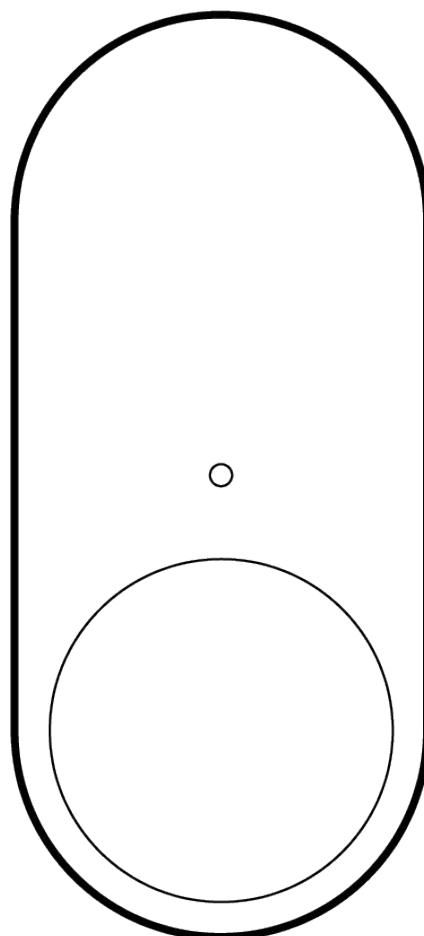

Document Details

v1.0 (20211004)

(V1.0 first published 20211004


Firmware

Firmware version can be verified on
Verkada Command command.verkada.com.



Introduction

What's in the box

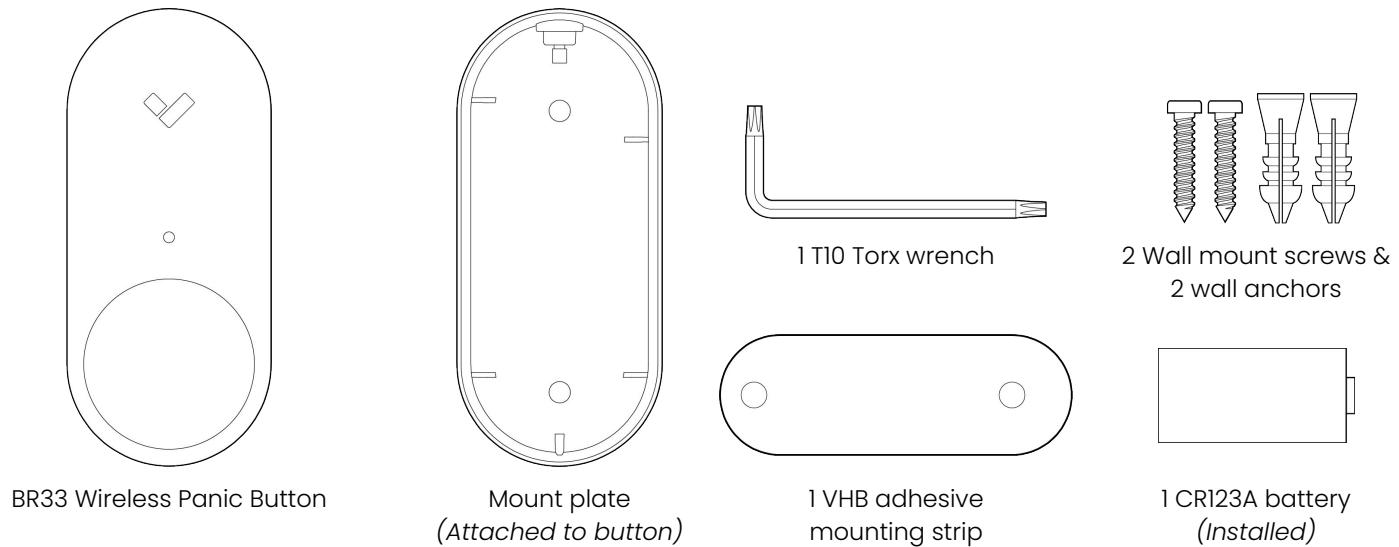


What you'll need


- A Verkada VLink hub
- A working internet connection
- A smartphone or laptop
- A #2 Phillips driver (screwdriver or power drill)
- $\frac{1}{4}$ inch (6.35mm) drill bit if using wall anchors

Mounting positions


Above surface

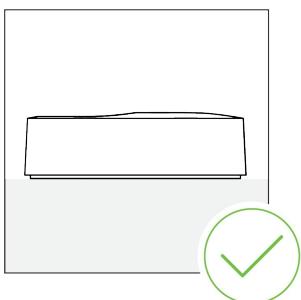


Side of surface

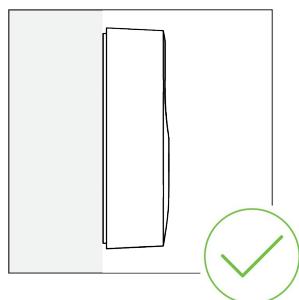

Below surface

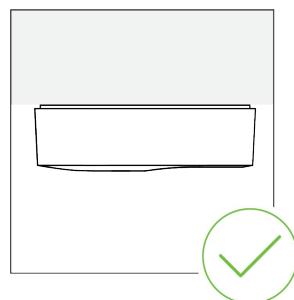

Sensor overview

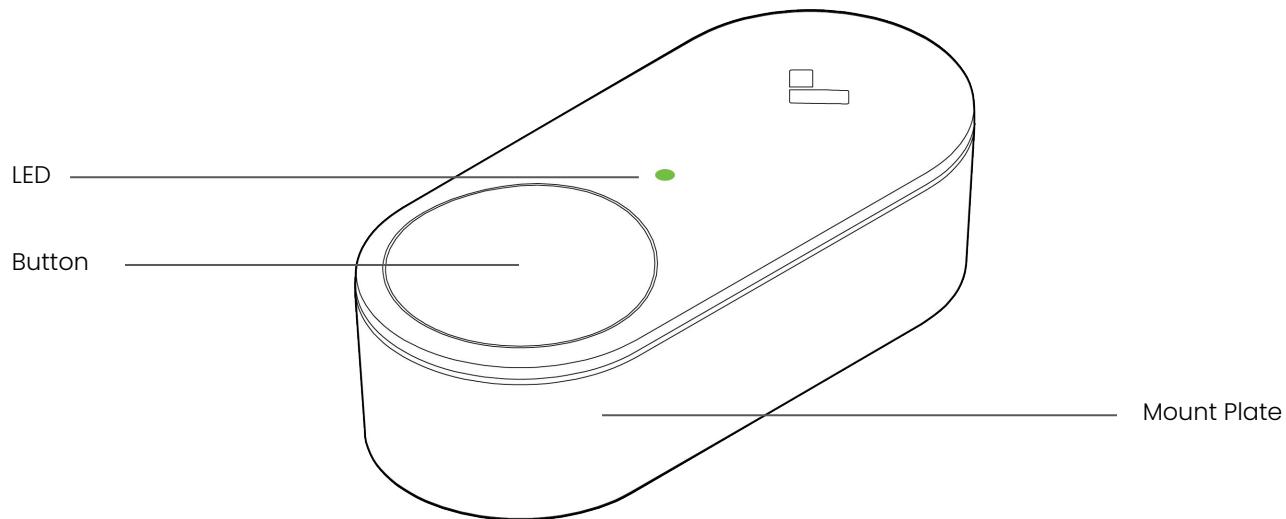

LED Behavior

LED off

Default state
(check status in Verkada Command)

LED blinking fast

Panic button pressed, but signal has not
been received by hub

LED on for 1 minute

Panic button pressed and signal received by
hub

LED blinks 3 times, every 2 minutes

Low battery

Connect


Please note: Add your VLink hub to
Command before setting up your Wireless
Panic Button.

- To register your product, please
proceed to: verkada.com/start


Installation

Mounting with screws

Unscrew captive T10 security screw to remove Button Unit from Mount Plate.

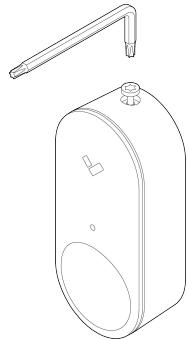


Remove pull tab between battery and battery contacts in Button Unit.

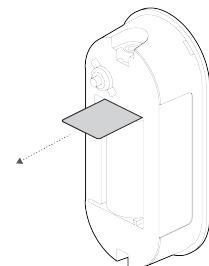


Drill holes in mounting surface.

Secure Mount Plate to mounting surface, using the 2 screws and 2 wall anchors (included).

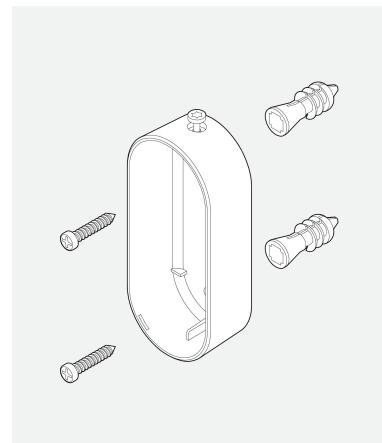

Insert Button Unit into Mount Plate until you hear a click.


Secure Button Unit in Mount Plate with the captive T10 security screw and T10 screwdriver.

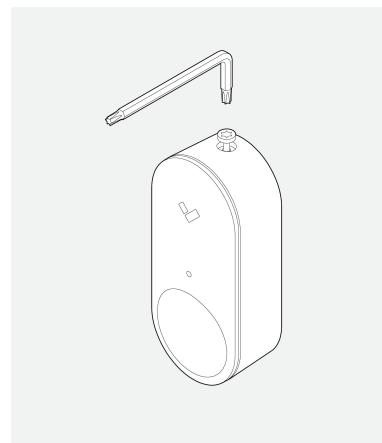


Installation

Mounting with VHB

Unscrew captive T10 security screw to remove Button Unit from Mount Plate.

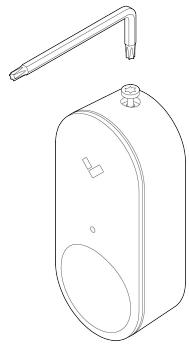


Remove pull tab between battery and battery contacts in Button Unit.

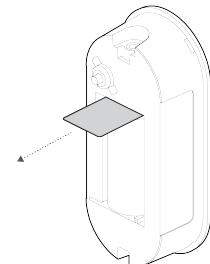


Peel protective film from one side of the adhesive mounting strip. Adhere to back side of device.

Peel the remaining protective film and adhere to the mounting surface.

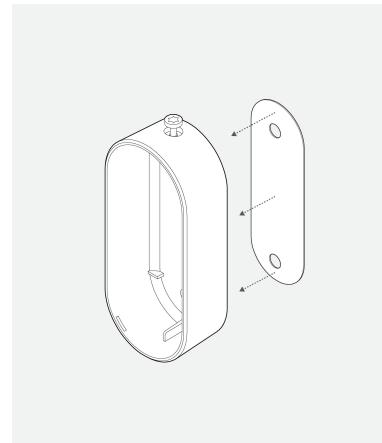

Insert Button Unit into Mount Plate until you hear a click.

Secure Button Unit in Mount Plate with the captive T10 security screw and T10 screwdriver.

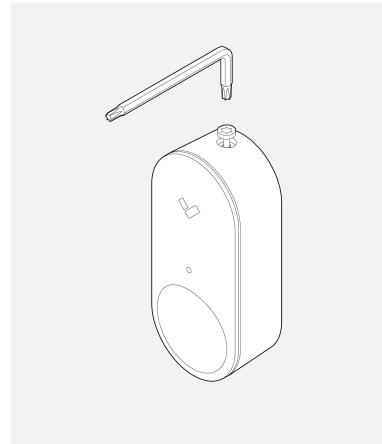

Appendix

BR33 Compliance

FCC Statement	<p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p> <p>This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">• Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver.• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help. <p>To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate his equipment. (Example – use only shielded interface cables when connecting to computer or peripheral devices)</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause harmful interference, and</p> <p>(2) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>IMPORTANT NOTE: Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>IC Statement</p> <p>This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause interference;</p> <p>(2) This device must accept any interference, including interference that may cause undesired operation of the device.</p> <p>Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :</p> <p>(1) l'appareil ne doit pas produire de brouillage;</p> <p>(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</p> <p>The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.</p> <p>Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.</p> <p>This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.</p> <p>Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.</p>
----------------------	--



Appendix

BR33 Compliance

EN 50131-1 BS EN 50131-1 Compliance	<p>This device has been tested by TUV Rheinland and complies with the requirements of a Grade 2, Environmental Class I I&HAS component as specified in the following standards:</p> <p>EN 50131-1:2006+A1+A2+A3 EN 50131-2-6:2008 EN 50130-5:2011 EN 50131-5-3:2017 EN 50131-6:2017+A1 BS EN 50131-1:2006+A1+A2+A3 BS EN 50131-2-6:2008 BS EN 50130-5:2011 BS EN 50131-5-3:2017 BS EN 50131-6:2017+A1 PD 6662:2017</p> <p>This device has been test by TUV Rheinland and is suitable for use in systems installed to conform to PD 6662:2017 at Grade 2 and Environmental Class I.</p> <p><u>Technical Specifications</u></p> <p>Power Supply: 1x CR123A 3V 1500mAh Lithium batteries Dimensions: 81 mm x 36 mm x 24 mm Weight: 49 g Operating Temperature: 0°C - 45°C Operating Humidity: 0-90%</p> <p>Low Power Indicator: if the power supply output is less than 2.15V a low battery message will be displayed in Command.</p> <p>For more information on device configuration please visit the Alarms page at help.verkada.com For detailed technical specifications please visit the Alarms page at docs.verkada.com</p>
--	--



Appendix

Support

Thank you for purchasing this Verkada product. If for any reason things don't work right, or you need assistance, please contact us immediately.

verkada.com/support

Sincerely, The Verkada Team

