


ACC-MNT-YPEND-1

Two-Camera Multisensor Pendant Cap

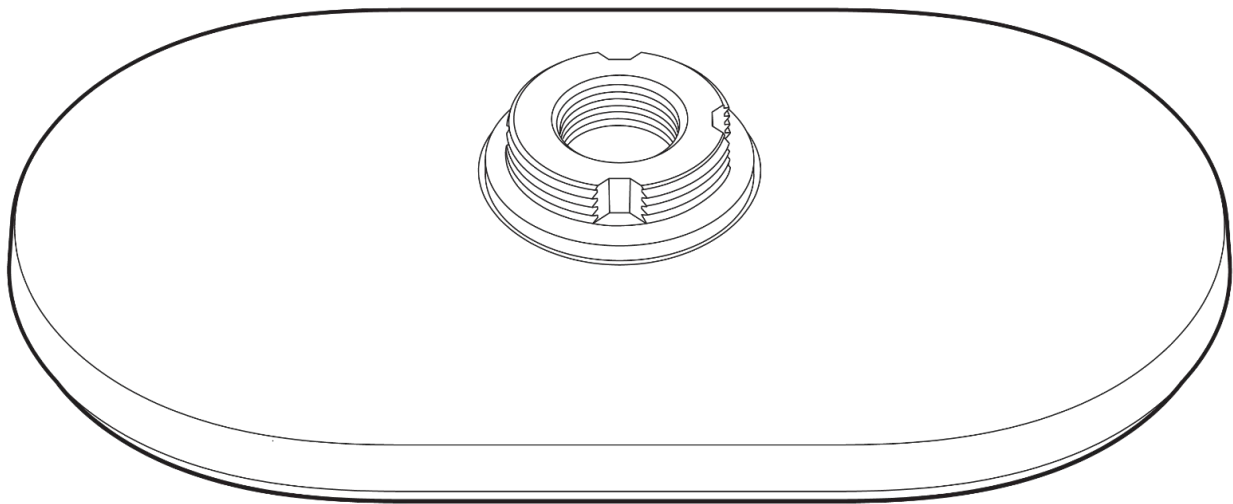

Document Details

Version

V1.0 20250611

(V1.0 published 20250611)

Firmware

Firmware version can be verified on Verkada

Command command.verkada.com.

Product Model

This install guide pertains to model ACC-MNT-YPEND-1.

© Copyright 2025 Verkada Inc. All rights reserved.

Verkada and the Verkada logo are registered trademarks or service marks of Verkada Inc. ("Verkada"). All other trademarks are the property of their respective owners.


Verkada may make changes to this document at any time without notice. The information presented herein may be inaccurate or outdated, and Verkada is under no obligation to maintain it. ALL INFORMATION IS PROVIDED "AS-IS" AND WITHOUT ANY WARRANTIES, IMPLIED, EXPRESS, OR OTHERWISE. VERKADA DISCLAIMS LIABILITY FOR ALL DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF USE OF THIS DOCUMENT.

Any intellectual property rights relating to Verkada products are and shall remain Verkada's exclusive property. Use of any Verkada product is subject to Verkada's end user agreement or other executed agreement with Verkada. No license, either expressed or implied, to use or distribute any Verkada product is granted under this document.


This document may not be sold, resold, licensed or sublicensed and may not be transferred without Verkada's prior written consent. No part of this document may be reproduced in whole or in part without the express written consent of Verkada.



What's in the Box

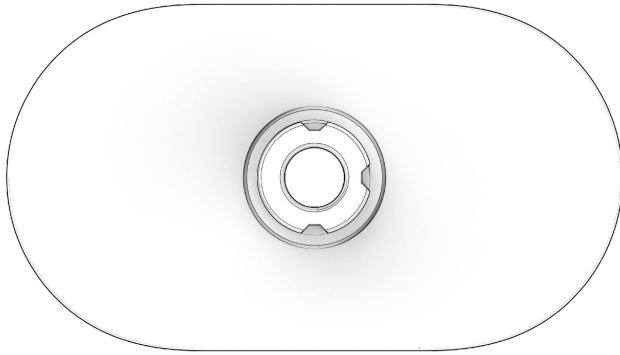

Pendant Cap

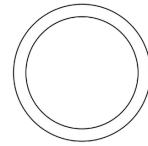

Rubber O-Ring
Diameter: 56mm



Leash
Length: 136mm Max Load: 10kg



M3x0.50 Machine Screw
Length: 8.4mm Drive: T10 Torx

What you'll need

- Compatible Verkada Product with its hardware
- A Cat5 or Cat6 Ethernet cable with a 0.2-0.25 inch diameter (5-6.5mm)
- Hex Key (3mm)
- T10 Torx Security Screwdriver

Preparation

Mounting Options

The Pendant Cap can be mounted with two different scenarios. The following pages outline both installation options.

Use the Arm Mount configuration for a lower profile installation where the cable is sitting inside the wall.

Use the Conduit Drop Pipe mounting configuration when installation conditions prohibits the cables from sitting inside the wall.


Arm Mount Mounting

Reference Mounting to an Arm Mount section



Conduit Drop Pipe Mounting

Reference Mounting to a 3/4" Conduit Drop Pipe section

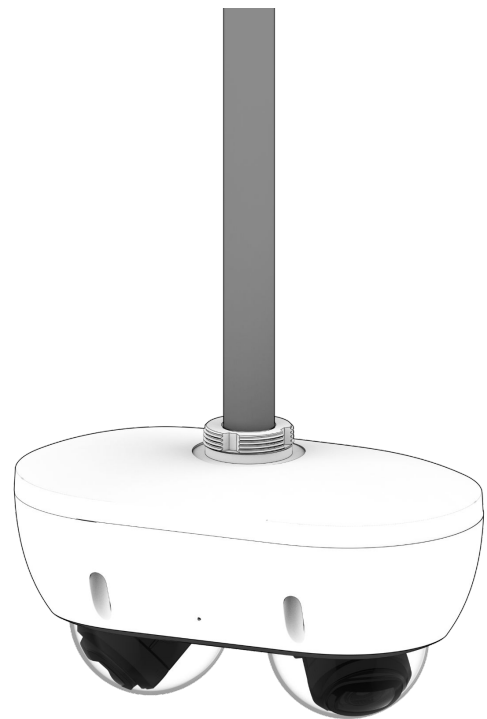

Installation

Prepare the Camera

Use the provided T10 Torx Security Screwdriver to loosen the screws and lift the cover of the camera.



x4



To remove the mount plate, loosen the mount plate screws with the T10 Torx Security Screwdriver and slide the camera upwards.



x2


Installation

Prepare the Camera


Lift the camera vertically off the mount plate and set aside.



Note: You will not use the camera mount plate when installing the camera onto the Pendant Cap.

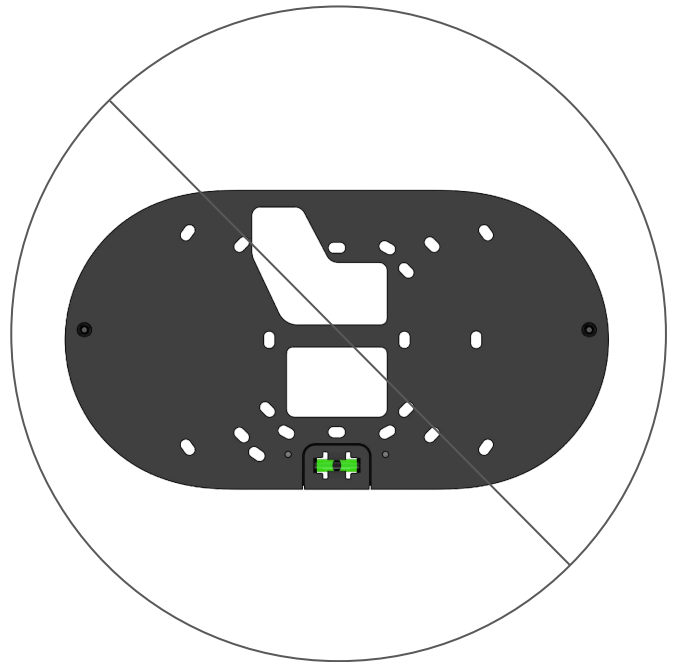

Attach leash to the bottom of the camera using the M3 screw and T10 Torx Security Screwdriver.

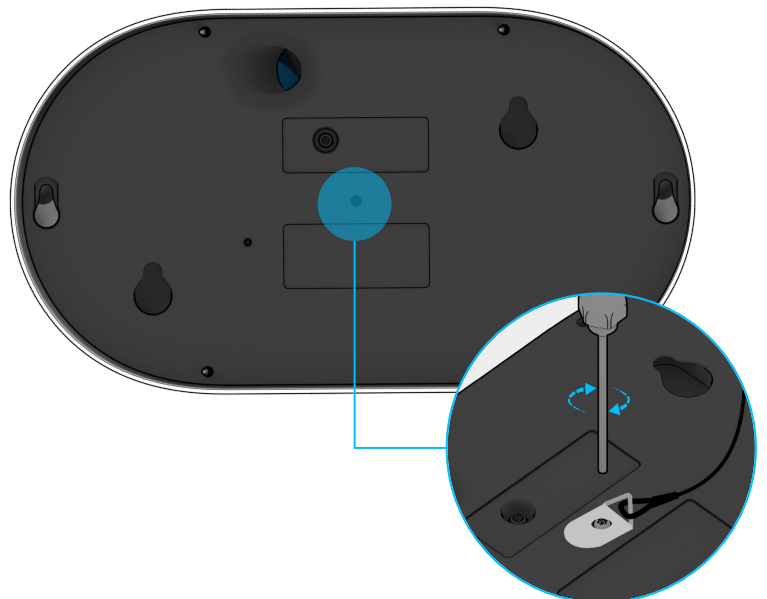

Installation

Mounting to an Arm Mount 1/4

Compatible Arm Mounts: ACC-MNT-ARM-1 and ACC-MNT-XLARM-1.


Pull the Ethernet cable through the Arm Mount and the Pendant Cap.

Make sure that the set screw on the arm mount does not protrude inside the thread.

Using the external 1 3/4" NPT threads, screw the Pendant Cap onto the Arm Mount.




Align the set screw to the notches on the Pendant Cap to ensure the exact 90° angle.

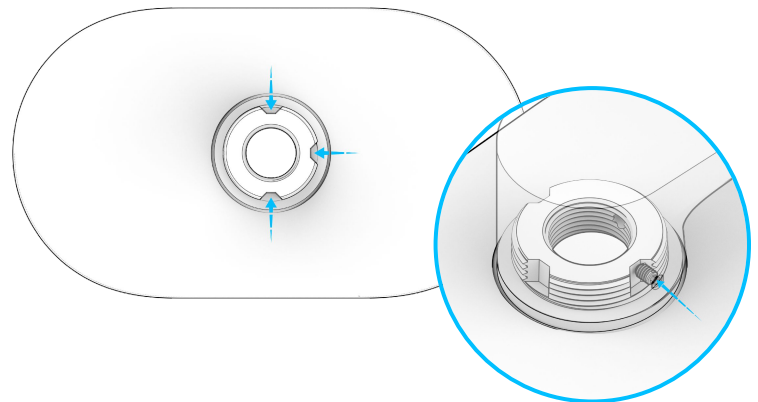

Tighten the set screw of the Arm Mount, using the Hex Key.

Do not overtighten the set screw, as it can deform the threads of the Pendant Cap.

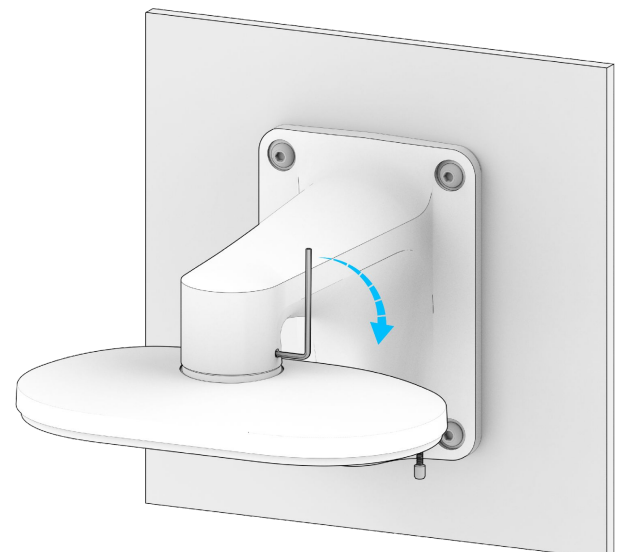

Installation

Mounting to an Arm Mount 2/4


Retrieve the camera.

Attach the camera by clipping the leash onto the Pendant Cap bracket.



Route the Ethernet cable through the latch hole on the camera.


Refer to the *Preparation* and *Mounting* sections of the camera install guide for accurate cable installation.

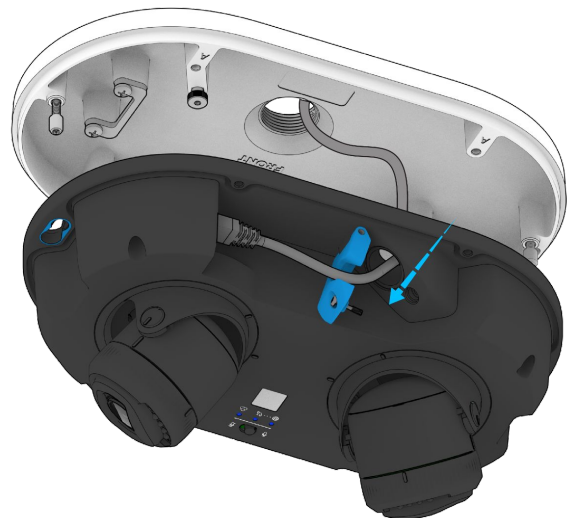

Installation

Mounting to an Arm Mount 3/4

Align the camera's blue holes with the thumb screws on the Pendant Cap.

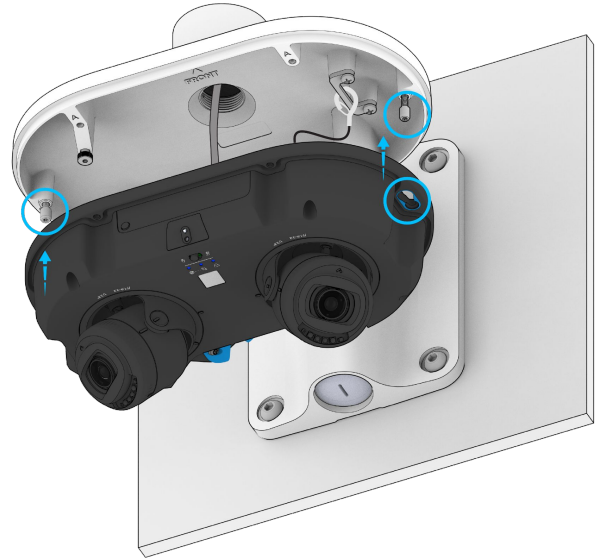


With thumb screws fully inserted, slide the camera forward.



Installation

Mounting to an Arm Mount 4/4

Tighten thumb screws using the T10 Torx Security Screwdriver to lock in place.

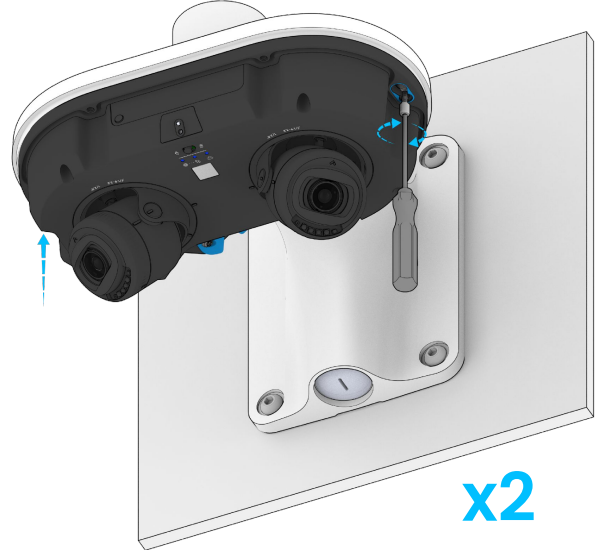

Place top cover back onto the camera.



Use T10 Torx Security Screwdriver to secure the top cover onto the camera.




Installation

Mounting to a 3/4" Conduit Drop Pipe 1/4


Pull the Ethernet cable through the conduit drop pipe and the Pendant Cap.

Screw the Pendant Cap onto the conduit drop pipe, using the internal 3/4" NPT threads.

Note: You will not need the Rubber O-Ring when mounting to the conduit drop pipe..

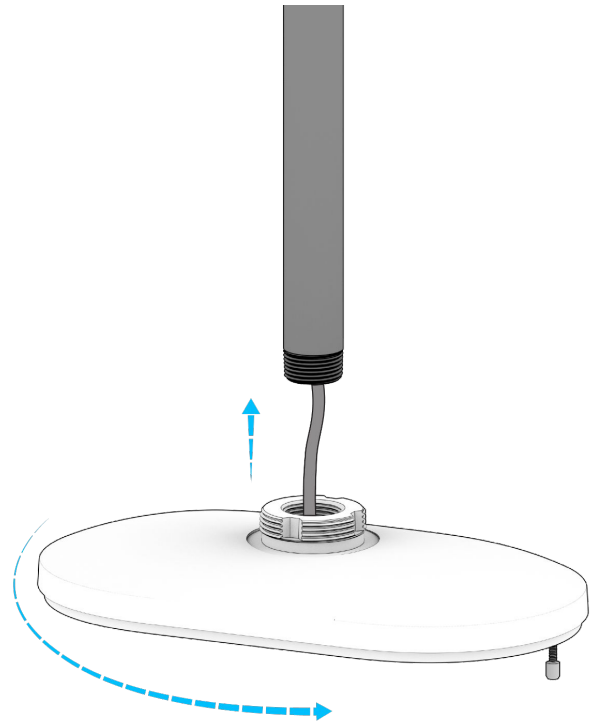

Secure by tightening the set screw using a 3mm Hex Key.

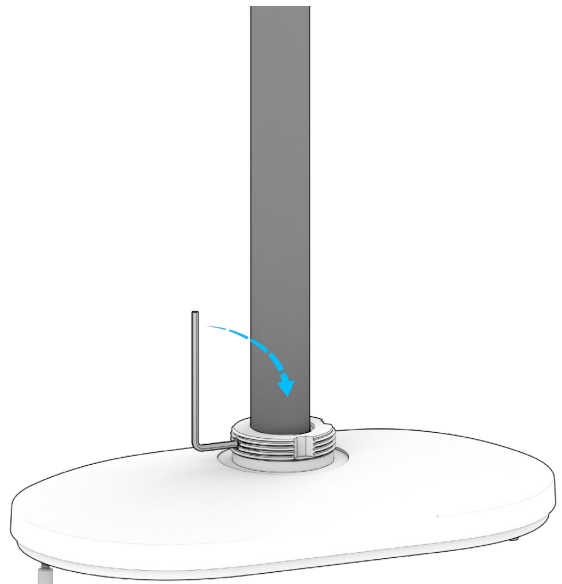

Installation

Mounting to a 3/4" Conduit Drop Pipe 2/4


Retrieve the camera.

Attach the camera by clipping the leash onto the Pendant Cap bracket.



Route the Ethernet cable through the latch hole on the camera.


Refer to the *Preparation and Mounting* sections of the camera install guide for accurate cable installation.

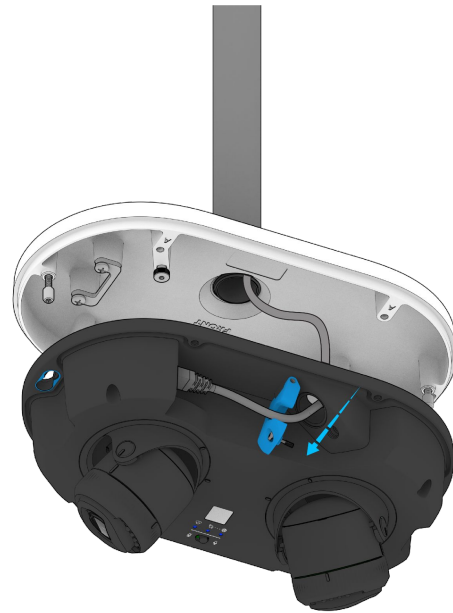

Installation

Mounting to a 3/4" Conduit Drop Pipe 3/4

Align the camera's blue holes with the thumb screws on the Pendant Cap.

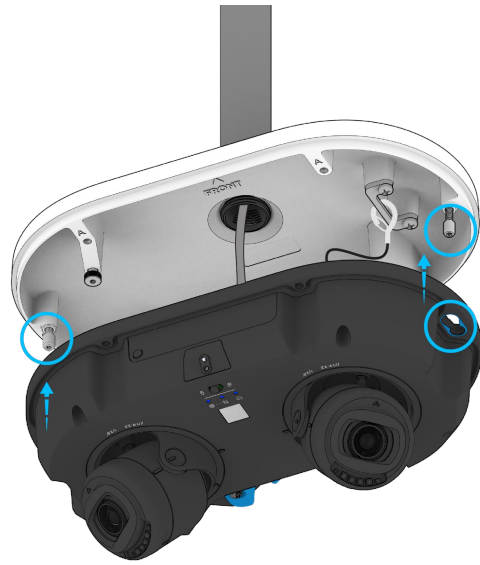


With thumb screws fully inserted, slide the camera forward.



Installation

Mounting to a 3/4" Conduit Drop Pipe 4/4


Tighten thumb screws using the T10 Torx Security Screwdriver to lock in place.

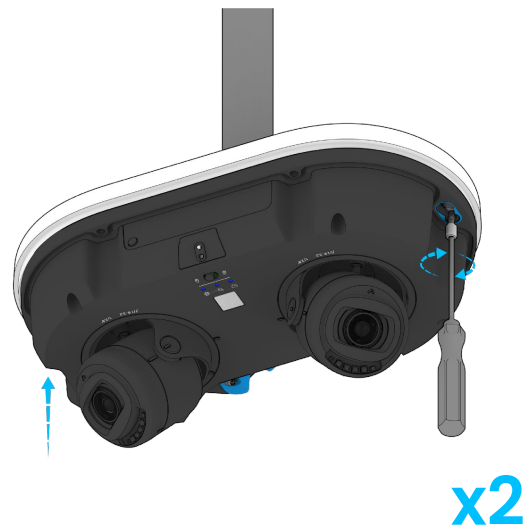

Place top cover back onto the camera.



Use T10 Torx Security Screwdriver to secure the top cover onto the camera.

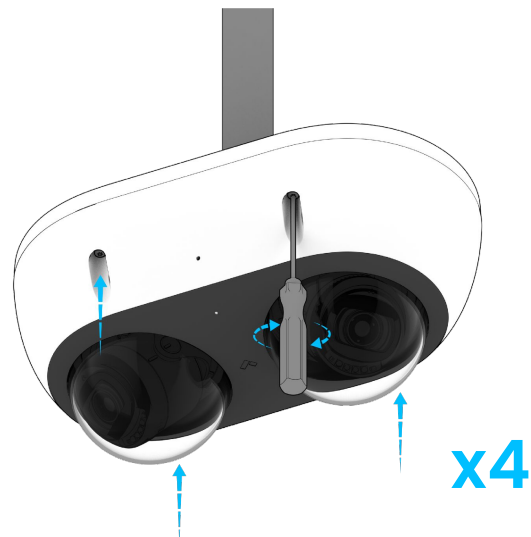

Appendix

Support

Thank you for purchasing this Verkada product. If for any reason you're experiencing issues or need assistance, please contact our 24/7 Technical Support Team immediately.

Sincerely,
The Verkada Team
verkada.com/support

