



TRIPOD Quick Start Guide

Packing List


3 X Leg with anodes		3 X Foot Spike	
1 X Mast		3 X Foot Plate	
3 X Spreaders		3 X Hydrophone Mount	

Hardware

1/4-20 Locking Hex Nut 316 Stainless Steel 50 INCLUDED	1/4-20 x 1" Hex Cap Screw 316 Stainless Steel 50 INCLUDED	1/4" Washer 316 Stainless Steel 100 INCLUDED


- Unless otherwise stated, all fastener joints are comprised of a 1/4-20 x 1" hex screw, two 1/4" washers, and a 1/4-20 Lock Nut.
- Torque fasteners to 10 N*m or firmly.
- If frequent disassembly of the system is required, it is highly recommended that marine-grade antiseize be used on the threads.

NOTE: It is recommended that the screws be left slightly loose and tightened at the end.

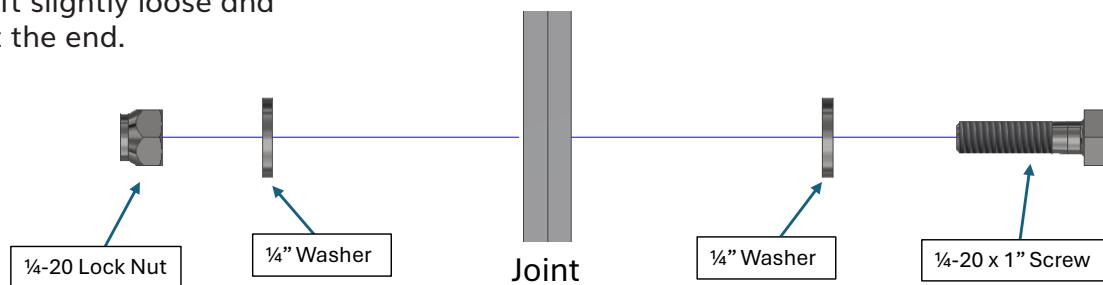


Step 1

Screw legs together.

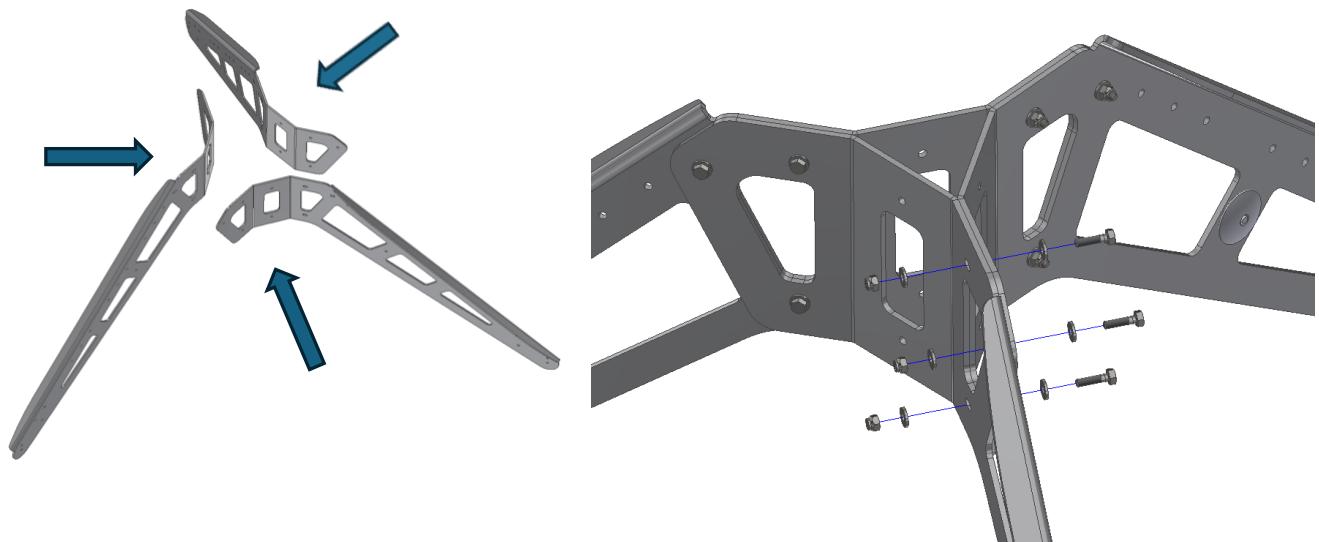



Step 2

Screw the braces between the legs.

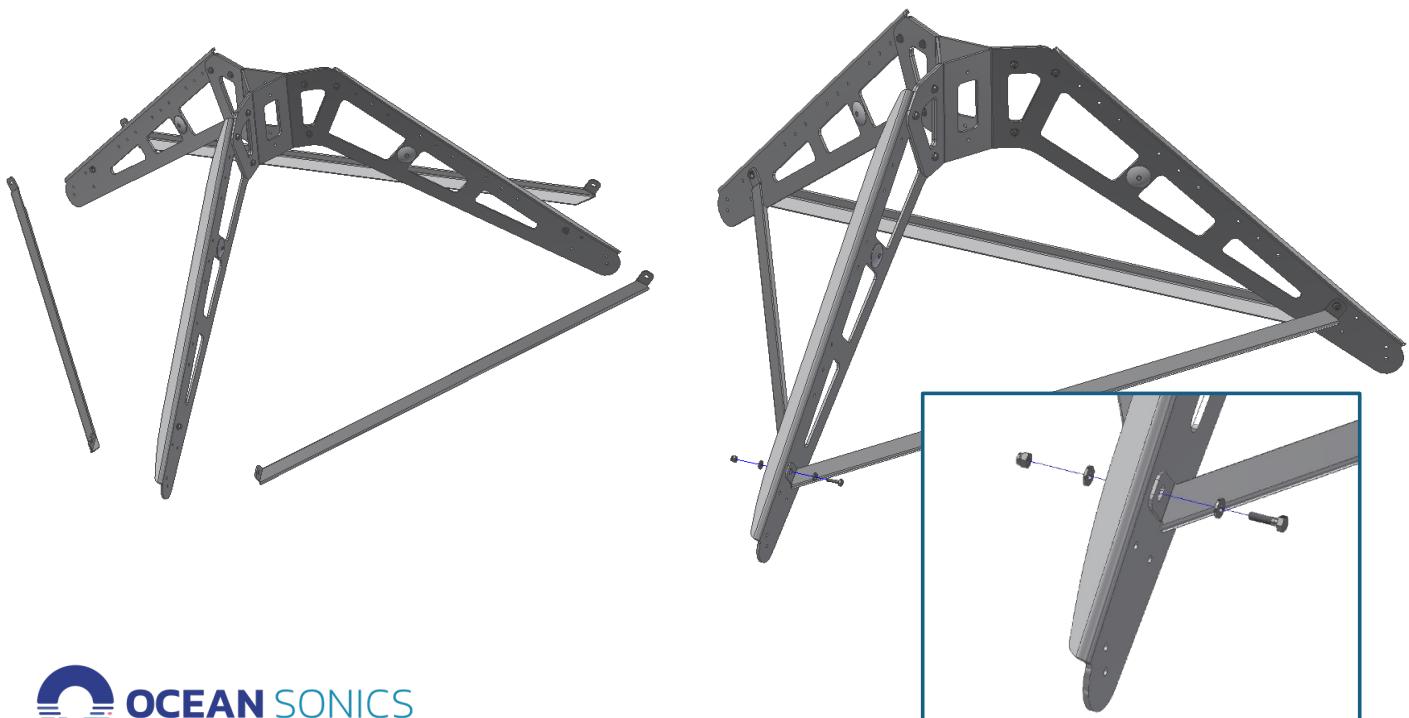


Step 3

Screw the foot spikes and foot plates to the end of each leg.

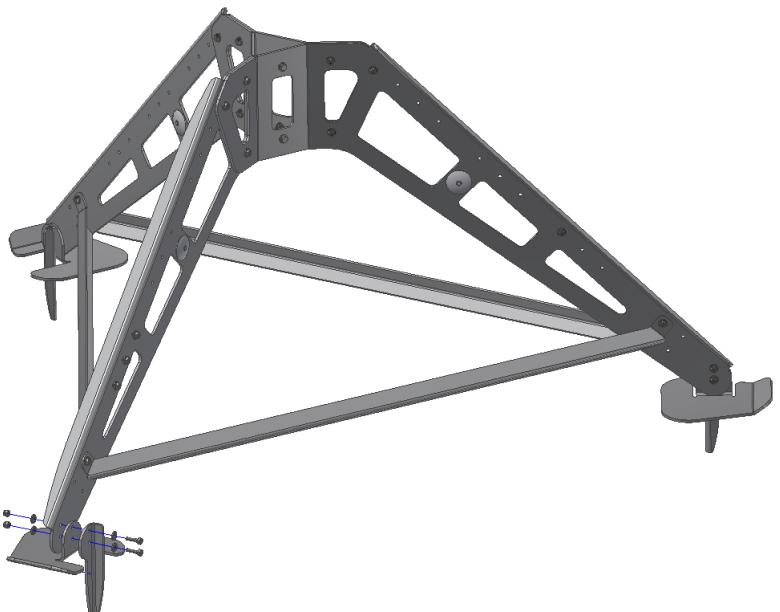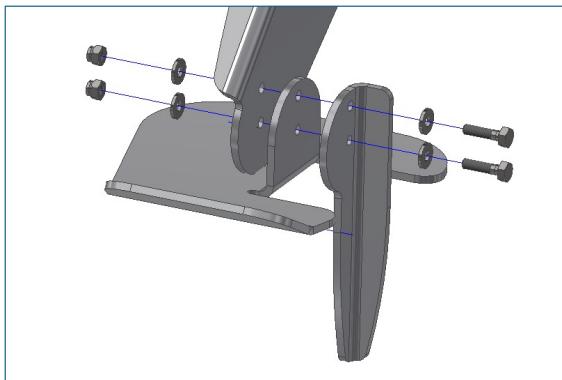

Step 4

Insert the mast down the triangular opening and screw into place. Note that the position of the mast determines the radius of the tetrahedron formed by the hydrophones.

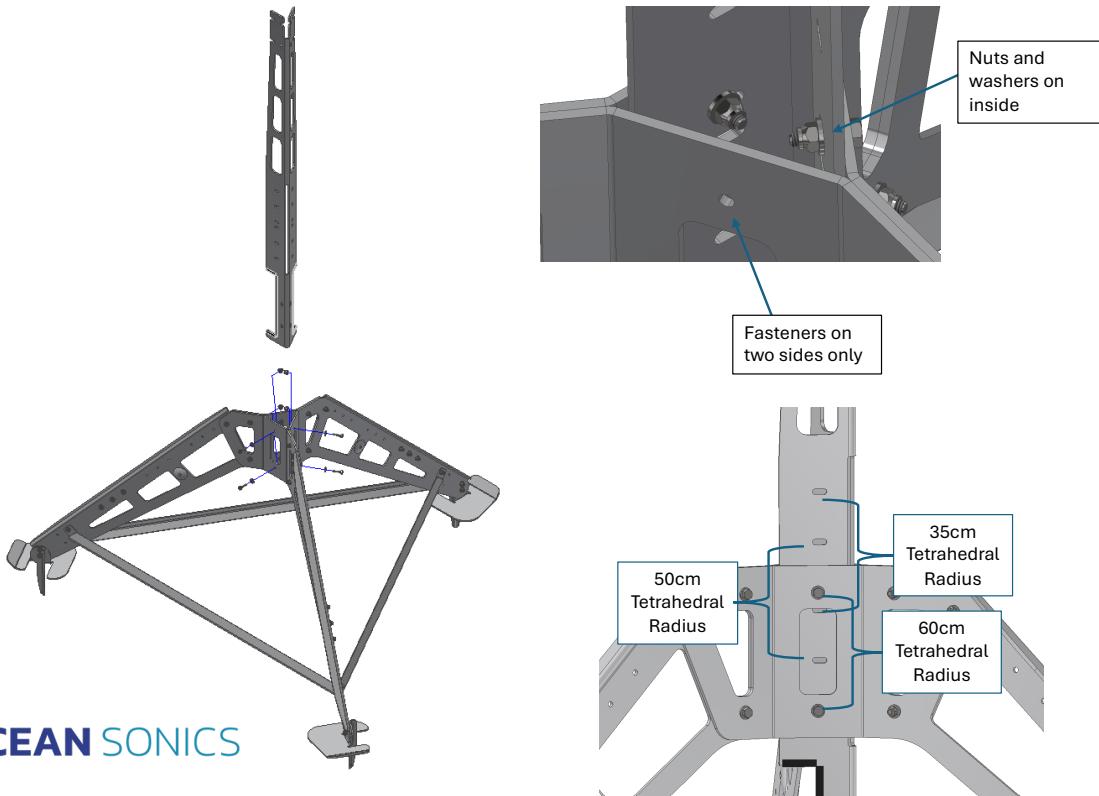

Step 5

Screw the Hydrophone holders to the legs. Note that the position of the hydrophone holders determines the radius of the tetrahedron formed by the hydrophones.

