


ACC-INT-HOOD-1 Rain Hood for TD53, TD63

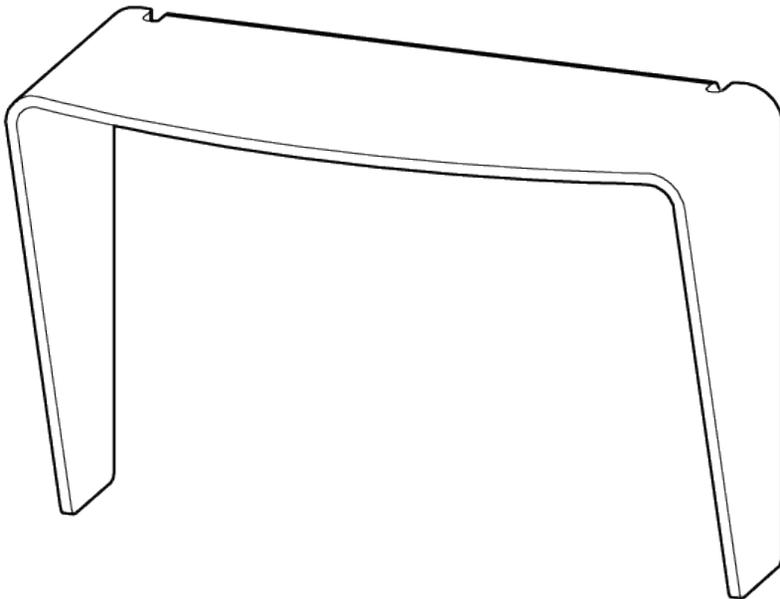

Document

Document Details

Version

V1.0 20241021

(V1.0 published 20241021)

Firmware

Firmware version can be verified on Verkada

Command command.verkada.com.

Product Models

This install guide pertains to models

ACC-INT-HOOD-1

© Copyright 2024 Verkada Inc. All rights reserved.

Verkada and the Verkada logo are registered trademarks or service marks of Verkada Inc. (“Verkada”). All other trademarks are the property of their respective owners.


Verkada may make changes to this document at any time without notice. The information presented herein may be inaccurate or outdated, and Verkada is under no obligation to maintain it. ALL INFORMATION IS PROVIDED “AS-IS” AND WITHOUT ANY WARRANTIES, IMPLIED, EXPRESS, OR OTHERWISE. VERKADA DISCLAIMS LIABILITY FOR ALL DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF USE OF THIS DOCUMENT.

Any intellectual property rights relating to Verkada products are and shall remain Verkada’s exclusive property. Use of any Verkada product is subject to Verkada’s end user agreement or other executed agreement with Verkada. No license, either expressed or implied, to use or distribute any Verkada product is granted under this document.

This document may not be sold, resold, licensed or sublicensed and may not be transferred without Verkada’s prior written consent. No part of this document may be reproduced in whole or in part without the express written consent of Verkada.



What's in the box

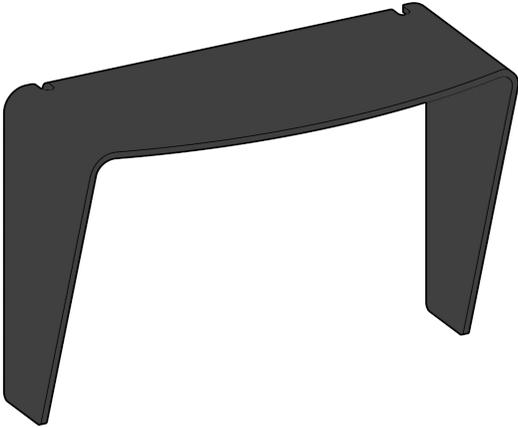

Rain Hood

What you'll need

- TD53 /TD63 Video Intercom
- A T10 security screwdriver
 - Provided with Video Intercom
- Two M3 T10 Screws
 - Provided with Video Intercom

Compatible Products

- TD53 Video Intercom
- TD63 Video Intercom
- ACC-INT-COND-2
- ACC-INT-COND-3
- ACC-INT-ANGLE-2
- ACC-INT-ANGLE-3
- ACC-INT-TRIM-1


Installation

Mounting

Note: If you are installing multiple accessories, install the Rain Hood first.

Remove the flat metal bracket on the back of the Intercom, by unscrewing the two M3 screws with a T10 Torx Security Screwdriver.


Save the screws for the next step.

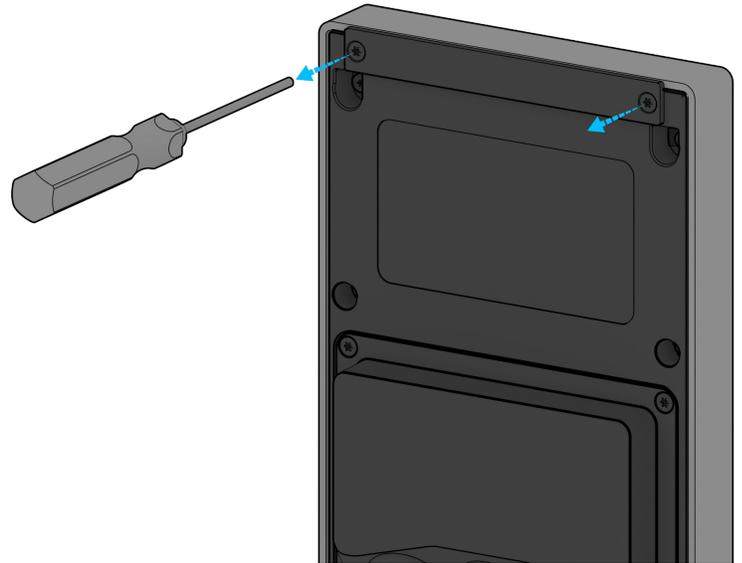

Align the Rain Hood to the top edge.

Retrieve the two M3 screws.

Secure the Rain Hood by tightening the two M3 screws with a T10 Torx Security Screwdriver.

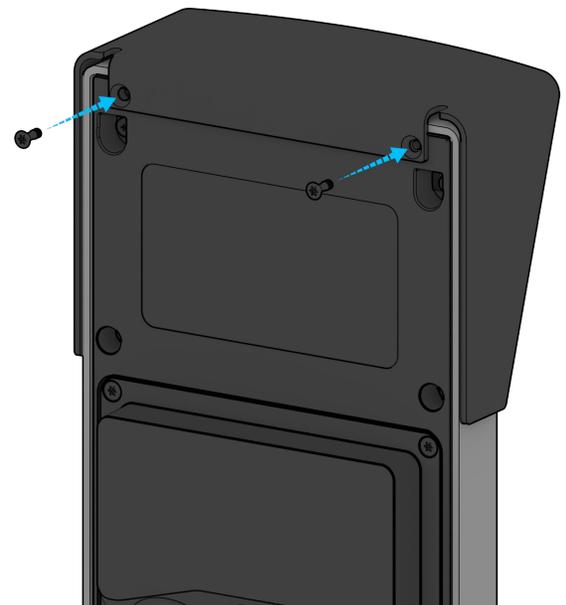

Appendix
Support

Thank you for purchasing this Verkada product. If for any reason you're experiencing issues or need assistance, please contact our 24/7 Technical Support Team immediately.

Sincerely,
The Verkada Team
verkada.com/support

