


CD62 Indoor Dome Camera

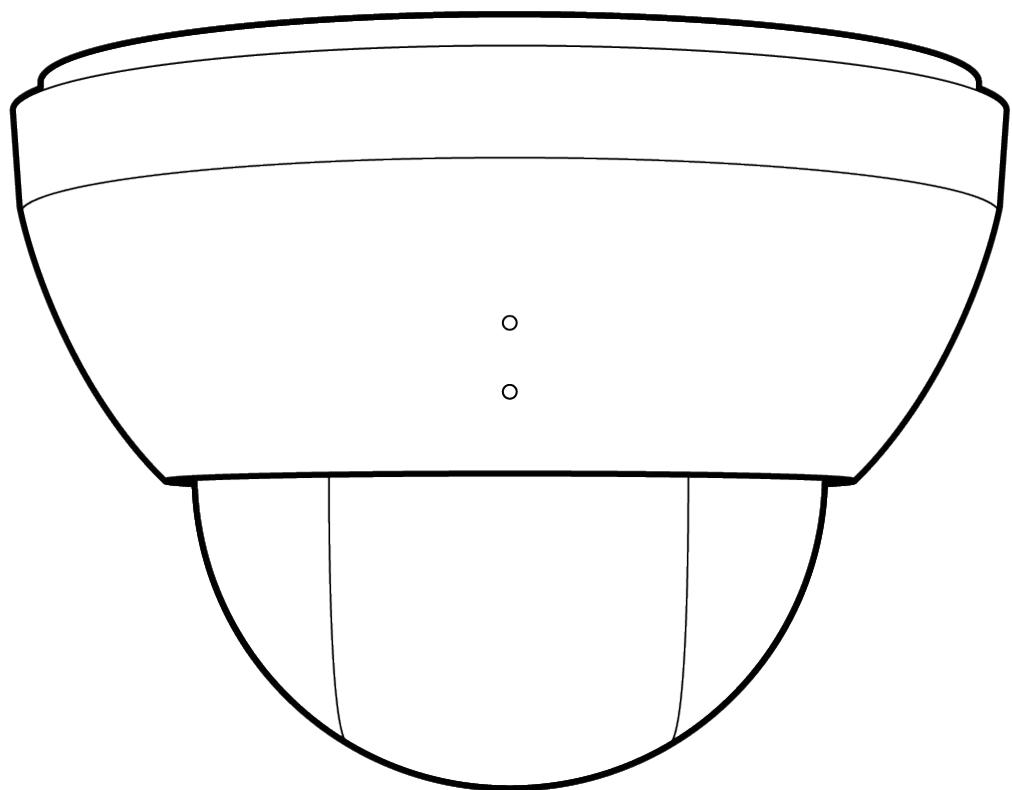

Document Details

v2.0 (20240501)

(V1.0 first published 20211208)

Firmware

Firmware version can be verified on
Verkada Command command.verkada.com.


Product Models

This install guide pertains to models CD62-HW.




Introduction


What's in the box

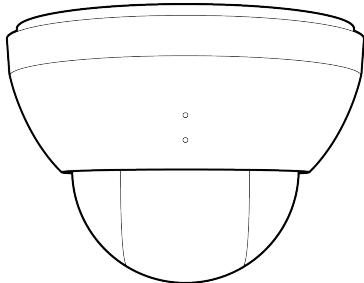


CD62 Indoor Camera

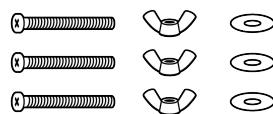


3 M4 x 50mm machine screws,
wing nuts, and washers

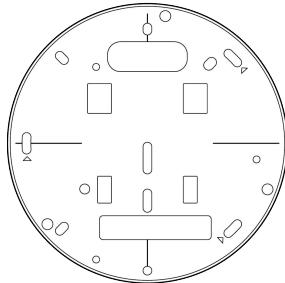


Mount plate
(Attached to camera)

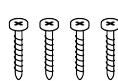

4 M4 x
25mm PH2
wall screws

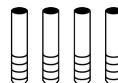

4 Wall anchors

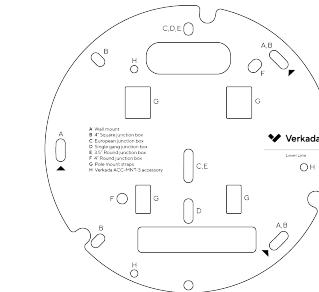

Mounting template



T10 Security Torx screwdriver

What you'll need

- A working Internet connection
- 802.3af Power over Ethernet (PoE) switch, or a PoE injector. For operation below -20° C, use 802.3at PoE.
- A smartphone or laptop
- A #2 Phillips screwdriver or power drill with a #2 Phillips driver bit
- 1/4 inch (6.5mm) drill bit for wall anchors
- 1/8 inch (3mm) drill bit for pilot holes
- A Cat5 or Cat6 Ethernet cable with a 0.2-0.25 inch outside diameter (5-6.5mm)

Placement

Mount the camera on a wall or ceiling. Try to keep the camera 8 to 10 feet above the ground.

For best night vision, avoid overhangs or obstructions. These may reflect the camera's IR illumination and reduce the image clarity in night mode.

Connect

For easy registration and setup, scan the QR code on the product.

If you prefer to manually register your product, please proceed to: verkada.com/start

LED Behaviors

Regular operation

- **Solid Orange**


Camera is on and booting up.

- **Flashing Orange**

Camera is updating firmware.

- **Solid Blue**

Camera is running, connected, and recording data.

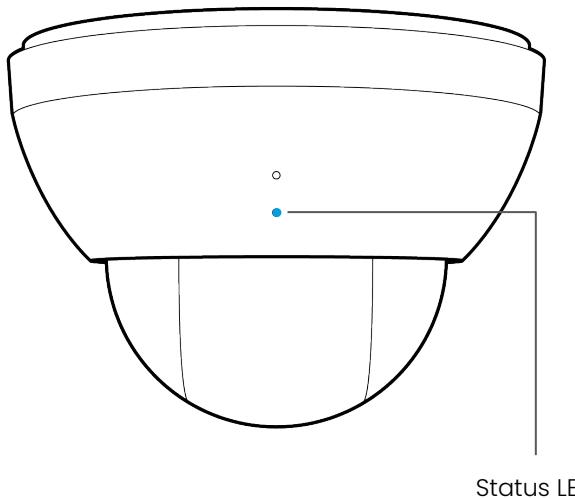

Status LED

Network errors

The LED will flash in a specific order, depending on the error state. You will see 1 blue flash, followed by a number of orange flashes.

1 Blue, 1 Orange

Camera is connected to the PoE, but unable to connect to the Switch.

1 Blue, 2 Orange

Camera has not received an IP address.

1 Blue, 3 Orange

Camera has detected duplicate IP addresses on the LAN.

1 Blue, 4 Orange

Camera is not able to reach the router.



Example of **1 Blue, 5 Orange** flash sequence

1 Blue, 5 Orange

Camera is not able to resolve Verkada hostnames.

1 Blue, 6 Orange

Camera is not able to receive a response from the NTP Server.

1 Blue, 7 Orange

Camera is not able to certify the SSL connection, likely due to SSL inspection.


1 Blue, 8 Orange

Verkada endpoints are not reachable after boot up.


Installation

Assembly 1/3

Please keep the protective film adhered to the clear bubble until completing the final step of installation.

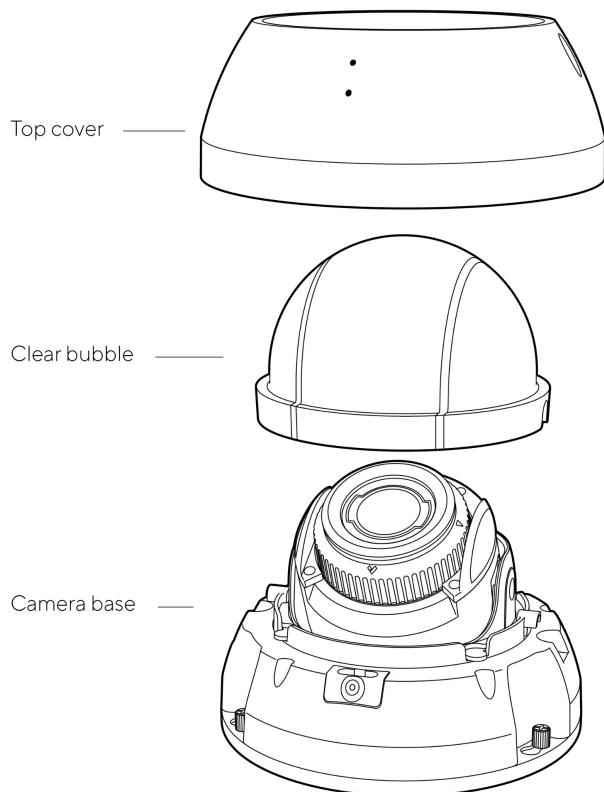


Unscrew the 2 Torx security screws on the top cover. Remove and set aside, while taking caution not to scratch the clear bubble.

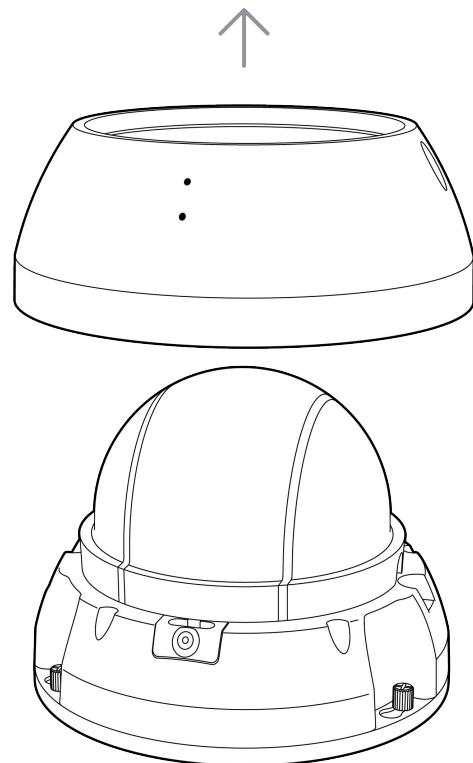

Installation


Assembly 2/3

Gently lift the clear bubble off of the camera body. Due to the magnetic attachment system, there will be a small amount of resistance.

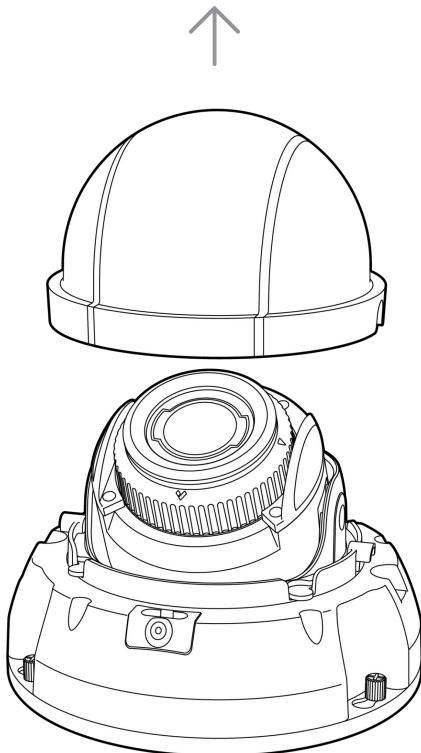

Insert the Ethernet cable into Ethernet port.

Connect the camera to an 802.3af/at Power over Ethernet port on your network. An orange LED on the camera's Ethernet port will indicate that it is powered and booting up. A green LED on the Ethernet port will indicate the camera is active.

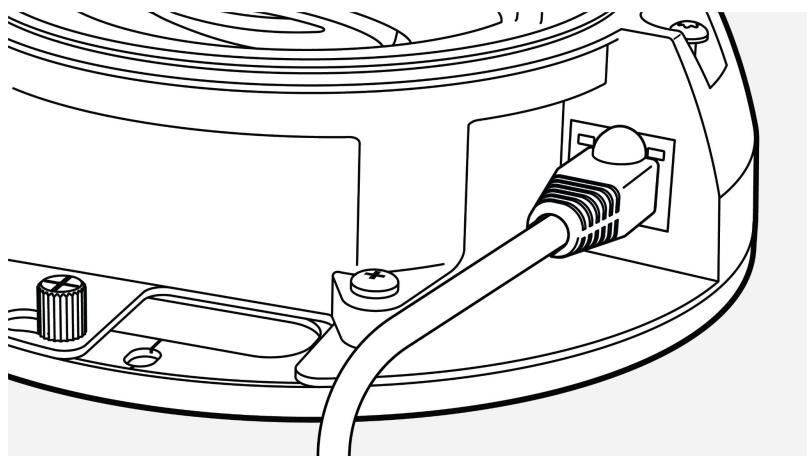


Scan QR code on camera base

For easy registration and setup, scan the QR-code on the product. If you prefer to manually register your product, please proceed to: verkada.com/start


Assembly 3/3

The status LED will turn orange to indicate the camera has power. The LED will turn blue to indicate the camera is active. See additional LED states and definitions under LED Behavior.


Gently pull the cable through the through-hole so it has some slack, but will not interfere with the top cover.

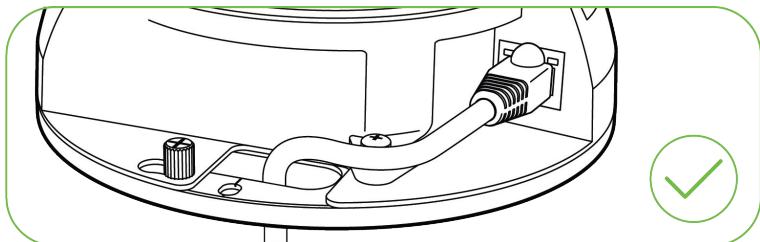

Pulling the Ethernet cable too tight will strain the cable which may impact data performance.

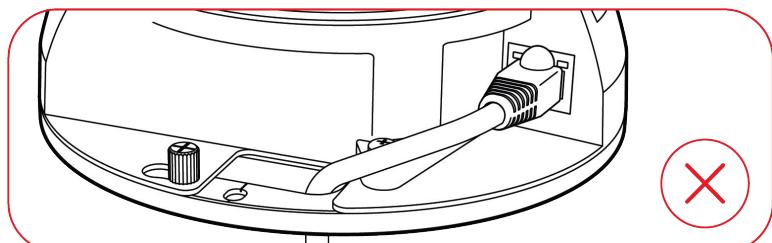

Too much slack in the Ethernet cable may create top cover installation issues.

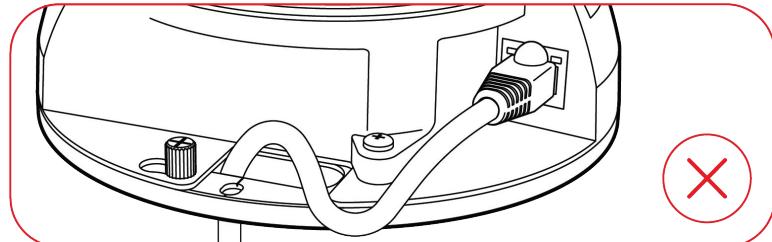

Mounting

1. Use the provided T10 security torx security screwdriver to loosen the screws and lift the cover. To remove the mount plate, loosen the mount plate screws and twist the camera counter-clockwise. Lift the camera vertically off the base plate and set aside.
2. Use the provided mounting template to mark wall mount holes. For a junction box mount, use the mounting template to determine the correct hole pattern.
3. For a solid material like wood or metal, drill 1/8 inch pilot holes. Drive mounting screws directly into the pilot holes.
4. For drywall, drill 1/4 inch holes. Insert plastic anchors into holes and drive mounting screws into anchors.
5. To secure the camera, place it over the mount plate screws and twist counter-clockwise. Tighten the mount plate screws with a Phillips screwdriver.




Adjust

Adjust your camera to the desired viewing angle.
Use the online stream to confirm image orientation.


Image can be flipped 180° online in Command.

Default image orientation is indicated by markings on the lens face. Video orientation is also adjustable from within the Verkada application.

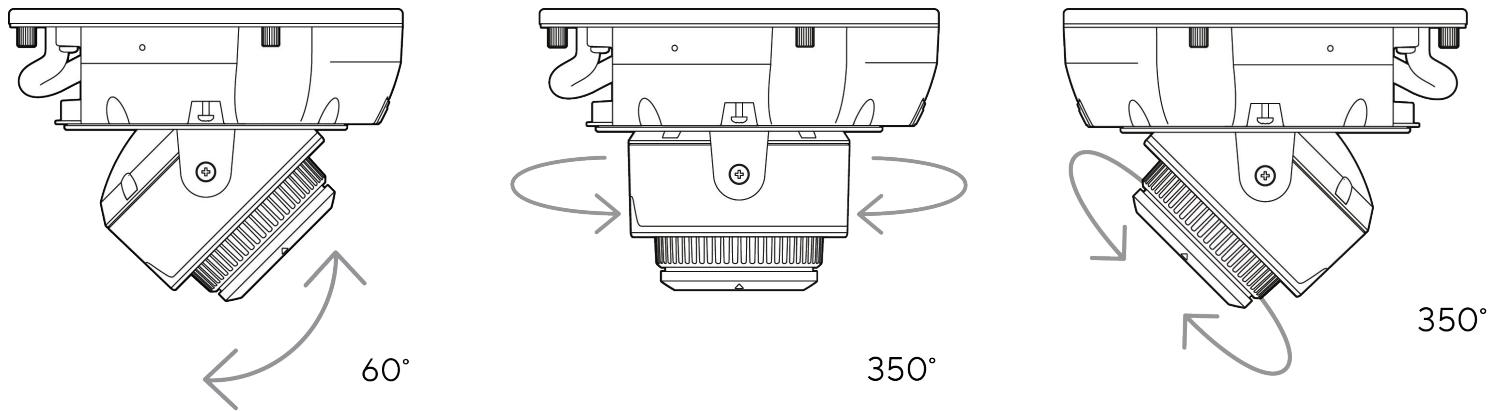


Secure

After positioning your camera correctly, carefully place the clear bubble back onto the camera base. The 4 magnets and 2 alignment features on either side will guide the bubble into position.

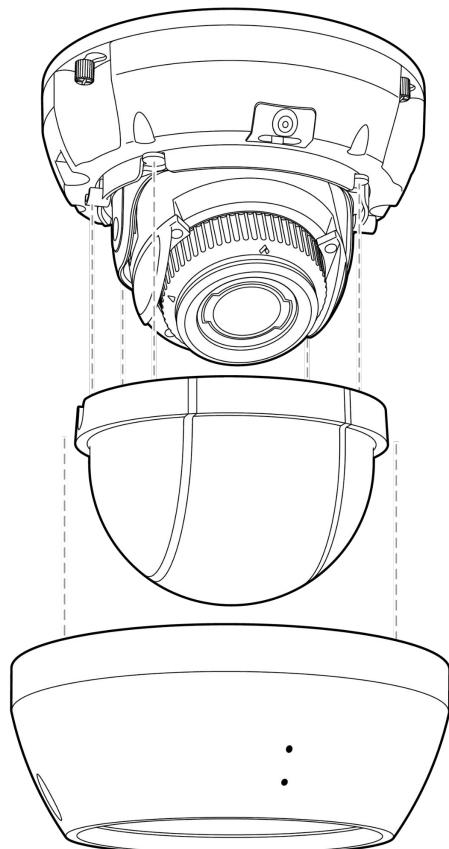

To secure the top cover, align it to the security holes on the baseplate. Tighten the 2 Torx security screws using the provided T10 Security Torx screwdriver.

Remove plastic film after top cover is secured.

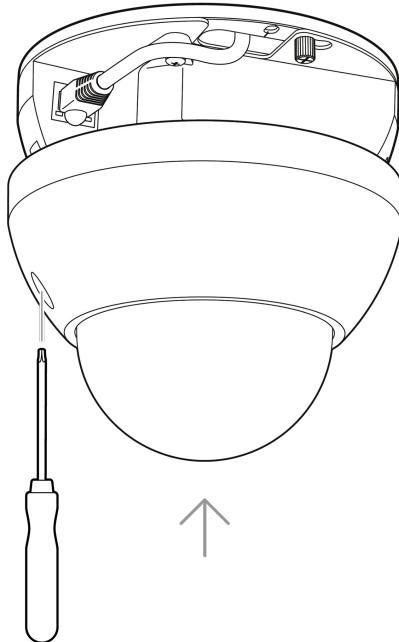

Appendix

CD62 Compliance

Caution	<ol style="list-style-type: none">1. Maintenance and repair work must always be carried out by qualified technical personnel. Disconnect power from the unit when performing a maintenance task.2. Wiring methods used for the connection of the equipment to earth shall be in accordance with the National Electrical Code, ANSI/NFPA 70, and the Canadian Electrical Code, Part 1, CSA C22.1.3. The product must be installed and protected in a location that is not easily accessible and is away from impacts or heavy vibration.4. The device is only to be connected to PoE networks without routing to outside plants.5. If powered by a power adapter, the adapter should be properly grounded.6. Please contact certified dealers for power adapters.
PoE Adapter	To reduce potential safety issues, only use the PoE adapter provided with the product, a replacement PoE adapter provided by Verkada, or a PoE adapter purchased as an accessory from Verkada.



Appendix

Support

Thank you for purchasing this Verkada product. If for any reason you're experiencing issues or need assistance, please contact our 24/7 Technical Support Team immediately.

Sincerely,
The Verkada Team
verkada.com/support

